

JB-G1 • R1 • 2026-07-30

蓝色花朵布罩台灯

BLUE FLORAL FABRIC SHADE TABLE LAMP



9 W

3-CCT

E26

使用说明书 | USER MANUAL

额定输入 / RATED INPUT

AC 100–265 V, 50/60 Hz

室内干燥环境使用 / Indoor dry locations only

安装或更换灯泡前，请断开电源并等待灯具冷却。

Disconnect power and allow the lamp to cool before assembly or lamp replacement.

01 安装 / ASSEMBLY

部件 / COMPONENTS

A1	灯头固定环 / Socket ring	A2	布艺灯罩 / Fabric shade
A3	底座与 E26 灯头 / Base with E26 holder	A4	9 W 三色温灯泡 / 9 W 3-CCT light source

3 步完成 / 3 EASY STEPS

1


将灯罩 A2 套在底座灯头 A3 上。
Place shade A2 over holder A3.

2

顺时针拧紧固定环 A1，灯罩应保持稳固。
Tighten socket ring A1 clockwise until secure.

3

将灯泡 A4 旋入 E26 灯头，勿过度拧紧。
Screw bulb A4 into the E26 holder; do not overtighten.

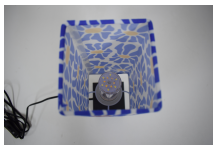

E26 灯头结构示意图 / E26 holder reference

02 操作 / OPERATION

按钮切换三色温 / 3-CCT BUTTON CONTROL



按键操作 / PRESS TO CYCLE

反复按动电线上的按钮，在 3000 K 暖光、4000 K 中性光与 6000 K 白光之间切换。

Press the inline button repeatedly to cycle through 3000 K warm, 4000 K neutral and 6000 K white light.

产品参数 / SPECIFICATIONS

项目 / Item	规格 / Specification
额定功率 / Power	9 W
额定输入 / Input	AC 100–265 V, 50/60 Hz
色温 / CCT	3000 K / 4000 K / 6000 K
灯头 / Holder	E26
开关 / Switch	电线按钮 / Inline push-button
电源线 / Cord	1500 mm, US 2-prong plug
整灯尺寸 / Size	103 × 103 × 336 mm

说明：本产品为三色温切换，不代表亮度分档调光。首次点亮顺序及断电记忆行为以量产驱动程序为准。

Note: This product switches color temperature; no brightness-level claim is made. First-on sequence and memory behavior follow the approved production driver.

03 安全与排查 / SAFETY & CARE

重要安全说明 / IMPORTANT SAFETY

- 仅限室内干燥环境使用；远离水源、潮湿、高温与易燃物。 / Indoor dry use only; keep away from water, heat and flammable materials.
- 安装、清洁或更换灯泡前拔下插头；待灯具完全冷却后再操作。 / Unplug before assembly, cleaning or bulb replacement; allow the lamp to cool.
- 电源线、插头、灯头或外壳损坏时立即停止使用。 / Stop use if the cord, plug, holder or enclosure is damaged.
- 不得私自拆改电气部件；使用与批准样品一致的灯泡、驱动、电线、开关和插头。 / Do not modify electrical parts; use the approved electrical configuration.
- 请勿拉扯电线拔插头；清洁时只用柔软干布。 / Do not pull the cord to unplug; clean with a soft, dry cloth only.

故障排查 / TROUBLESHOOTING

现象 / Symptom	处理 / Action
不亮 / No light	确认插头、按钮和灯泡安装。 / Check plug, button and bulb seating.
灯罩松动 / Loose shade	断电后重新拧紧固定环。 / Unplug and retighten the socket ring.
闪烁或异常 / Flicker	停止使用，由合格人员检查。 / Stop use; have it checked by qualified personnel.

文件控制 / DOCUMENT CONTROL

型号 JB-G1 · 版本 R1 · 2026-07-30

本说明书未声明 UL、ETL、CE、FCC、RoHS 或保修条款；任何认证标识须由覆盖该型号及配置的有效文件支持。